


# S6026P SLM

07-10 CHEV/GMC 2500/3500 6.6L DURAMAX, PARTICULATE FILTER BACK, 4" SINGLE SIDE

**MBRP**  
INC.  
PERFORMANCE EXHAUST

27-Mar-18

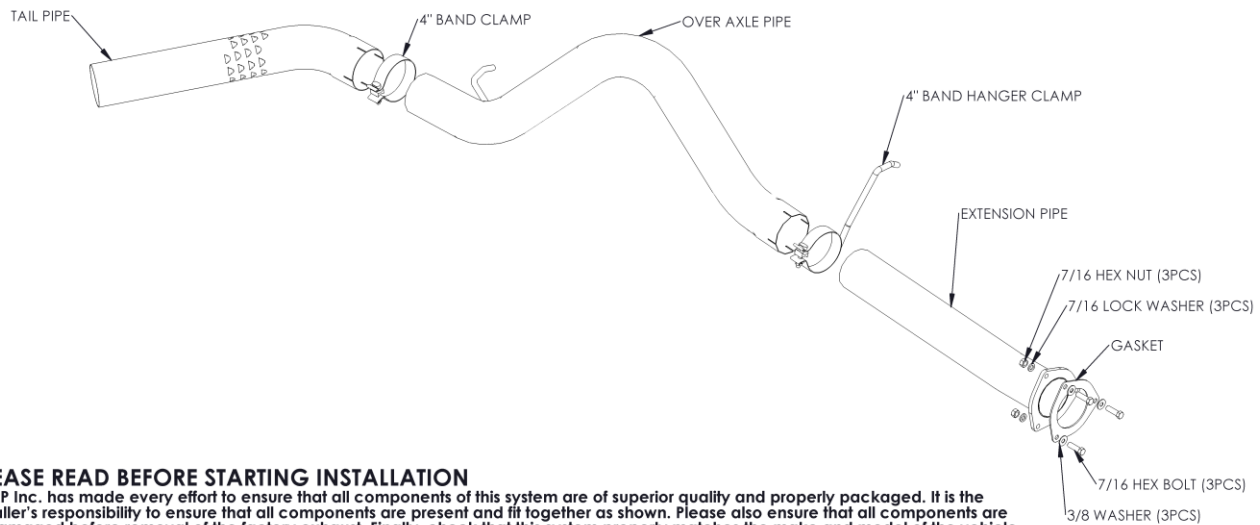

## PLEASE READ BEFORE STARTING INSTALLATION

MBRP Inc. has made every effort to ensure that all components of this system are of superior quality and properly packaged. It is the installer's responsibility to ensure that all components are present and fit together as shown. Please also ensure that all components are undamaged before removal of the factory exhaust. Finally, check that this system properly matches the make and model of the vehicle and will not interfere with previous or planned modifications.

## Removal of stock system:

1. Apply a penetrating lubricant liberally to all exhaust fasteners, hangers and rubber isolators.
2. Remove the factory tail pipe assembly from the factory rubber isolators.
3. Cut the factory tail pipe after the muffler and remove the rear section.
4. Remove the three nuts at the muffler inlet flange and remove the muffler.

## Installation of MBRP Inc. Performance Exhaust:

1. Install the three supplied 7/16" Bolts in the existing flange and place the supplied Gasket over the 7/16" Bolts.
2. Install the Extension Pipe onto the flange. There is a slight bend in the Extension Pipe. The inside of this bend must face the driveshaft. If the outlet of the Extension Pipe angles slightly towards the driveshaft you have installed it correctly. Failure to install this pipe correctly will result in the Tail Pipe not fitting properly. Secure with the three supplied 7/16" Flat Washers, three 7/16" Lock Washers and three 7/16" Nuts.
3. Slide the 4" Band Hanger Clamp over the outlet of the Extension Pipe and install the factory rubber isolator. Install the Over Axle Pipe from the rear of the truck over the axle and slide on to the Extension Pipe. Install the Over Axle Pipe hanger into the factory rubber isolator.
4. Install the Tail pipe onto the Over Axle Pipe using the 4" Band Clamp provided. Align the exhaust as required. Starting from the front of the exhaust tighten all connections.
5. Check along the whole length of the exhaust system to ensure that there is adequate clearance around the spare tire, fuel and brake lines or any wiring. If any interference is detected relocate or adjust.

**Congratulations!** You are ready to begin experiencing the improved power, sound and driving excitement of your MBRP Inc. performance exhaust system. We know you will enjoy your purchase.